

01473 826699 Www.jim-lawrence.co.uk





ARUNDEL WALL LIGHT FISHER WALL LIGHT

## Safety First

If in any doubt about electrical safety, contact a qualified electrician. Installation should always be carried out by a qualified electrician or a competent person in accordance with current electrical regulation.

Any modification to this light could potentillay void any IP rating.

Please note that all our lights require earthing. This light must be installed in accordance with the latest edition of British Standard 7671.


The electricity supply should always be isolated at its source (fuse box) before attempting any installation or maintenance.


Please do not fit bulbs exceeding the maximum allowable wattage as shown on the label adjacent to the bulb holder. Please note we do not recommend using halogen bulbs in our lights.

If the external flexible cable or cord of light is damaged, it shall be exclusively replaced by Jim Lawrence or a similar qualified person in order to avoid a hazard.

If any glass components of this light are damaged during transit, please contact Jim Lawrence to discuss replacements. All our glass has arrised edges, but we recommend gloves are to be used when handling.

This product is intended for indoor use only.  $220-240V \longrightarrow 50-60$ Hz.

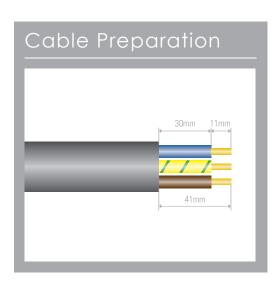

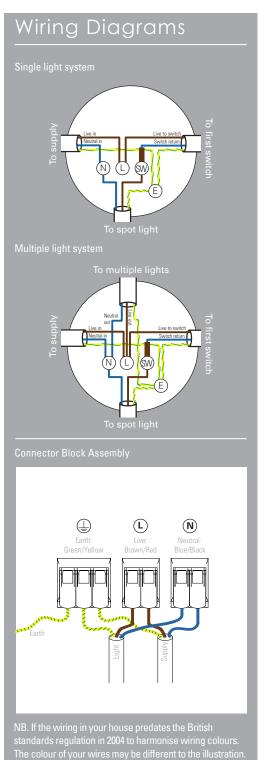

## Fitting Advice

These fitting instructions are for fitting the Arundel or Fisher Wall light, IP20 products.


Before installing the light, switch off the mains electricity supply. If required, disconnect and remove your existing light making notes of the how the wires are positioned and connected.

Offer the backplate and cavity cup to the wall where you would like to position your light, ensuring you have a strong fixing point. Mark and drill the holes for the fixing screws taking care not to damage any electrical cables. You will need to cut a 39mm DIA hole to fit the box within your wall cavity. In many older houses this point can take time to prepare. Insert wall plugs specific to wall type if necessary.

If you are unable to create enough space in your wall cavity for the wiring, we offer a backplate pattress which enables wiring to be fitted externally if required. Please see our website or brochure for details or call us on 01473 826699.

We reccomend you use the provided connector blocks attached, within the cavity cup to connect your light to the supply wire. Feed the supply cable through the centre of the cavity cup and ensure the cables are fully inserted into the connector block in accordance with the wiring diagram. Screw the light to the wall using the screws provided.

Please retain these fitting instructions for future reference.

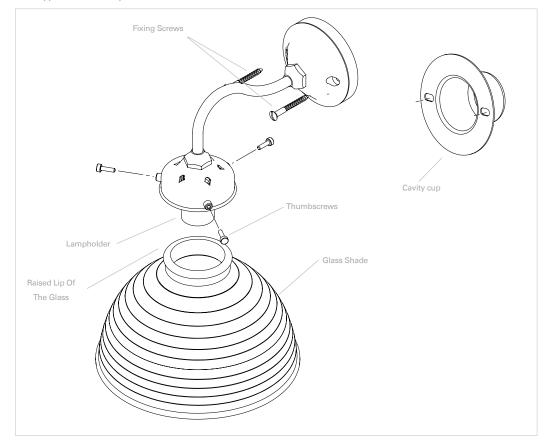

This information is intended as a guide only. Please see the latest IEE Wiring Regulations for full details.

Jim Lawrence takes no responsibility for incorrectly installed lights & recommends that all lights should be installed by a qualified electrician. These details are correct at time of print.